



Generate Report: [Select A Report](#) · View Form: [Select A Form](#) ·

## Sample Details

Sample Name: N243-G-05-F


Building:	<input type="text" value="N243"/>	Floor:	<input type="text" value="Basement"/>	Location:	<input type="text" value="C001"/>
Canister ID:	<input type="text" value="AC01533"/>	Flow Controller ID:	<input type="text" value="NA"/>		
Interval:	<input type="text" value="Grab"/>	Sample Type:	<input type="text" value="Pathway"/>	HVAC On:	<input type="text" value="False"/>

Canister Setup By:	<input type="text" value="DA"/>	Date Time:	<input type="text" value="5/27/2012 1:10:58 PM"/>	Initial Reading:	<input type="text" value="0"/> Hg Inches
--------------------	---------------------------------	------------	---	------------------	--

Sample Started By:	<input type="text" value="DA"/>	Date Time:	<input type="text" value="5/27/2012 3:10:00 PM"/>	Vacuum Reading:	<input type="text" value="0"/> Hg Inches
--------------------	---------------------------------	------------	---	-----------------	--

Start Comments:

Set up time/date/vacuum wrong, not in log book. Starting vacuum reading "NA" on log sheet.

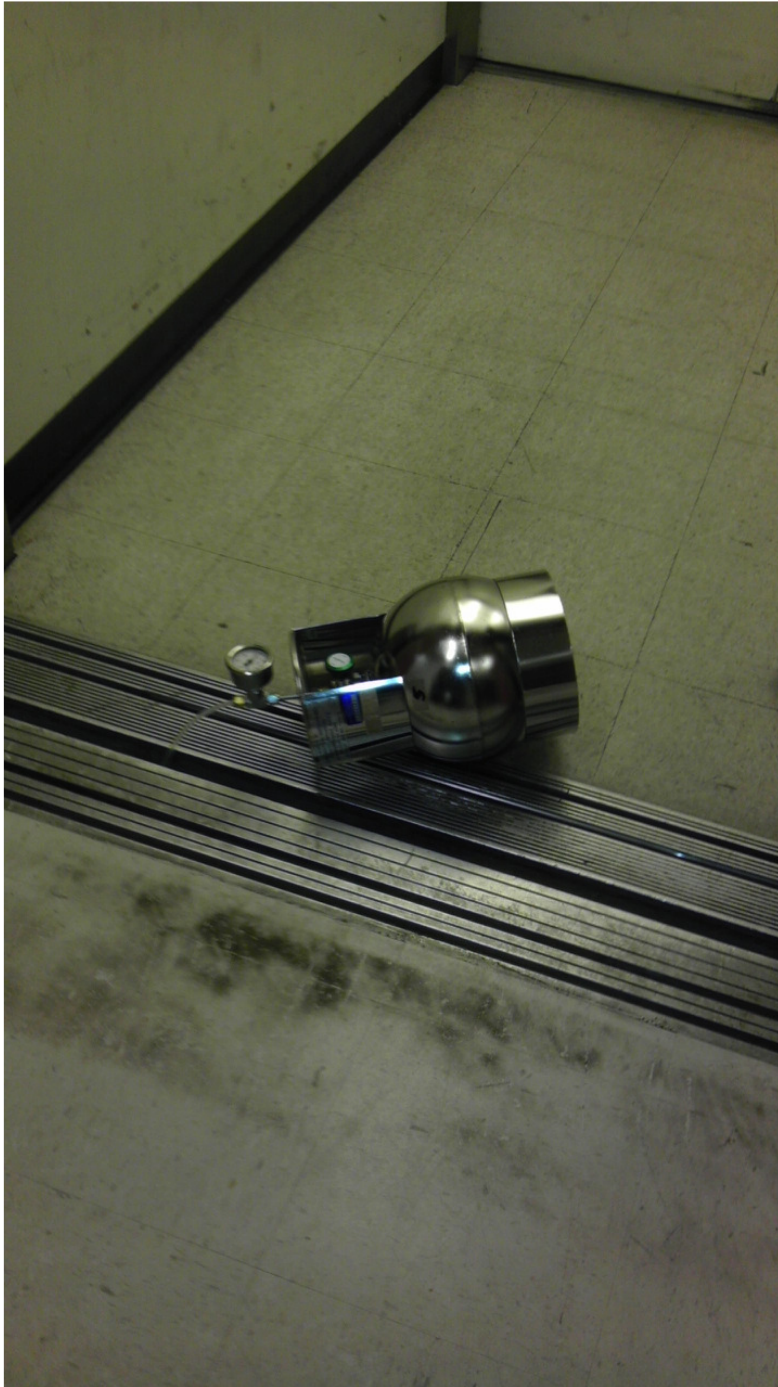

Sample Ended By:  Date Time:  Vacuum Reading:  Hg Inches

End Comments:

QA'd:  QA'd By: